


## DIN RAIL UPS SNMP / WEB CARD QUICK SETUP GUIDE

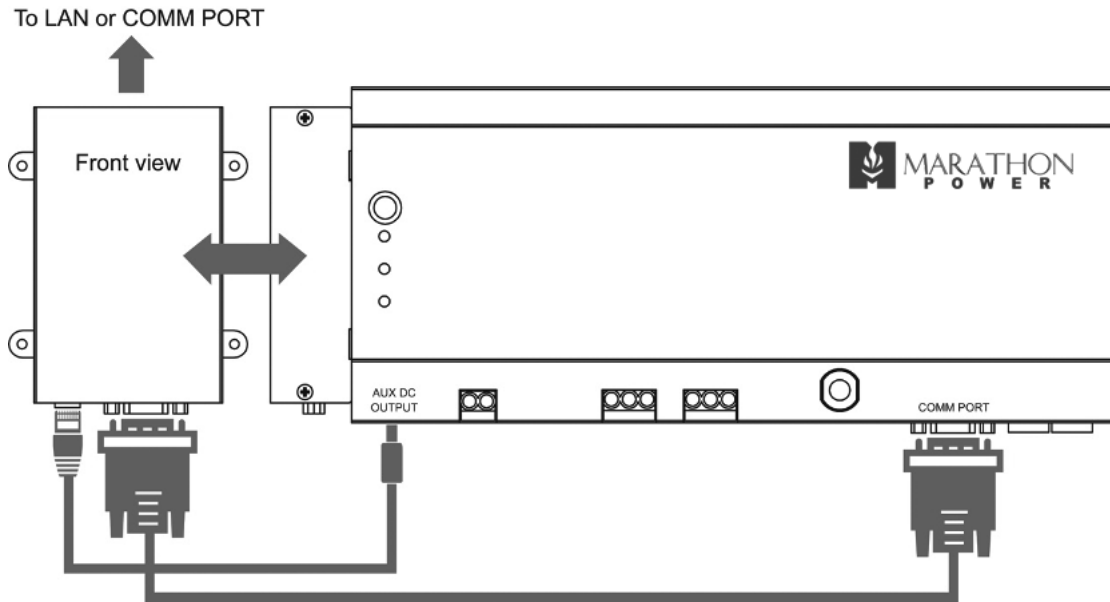

### Instructions

1. Following the diagram above, connect the Power-cord and RS232 cable from the UPS to the SNMP box.
2. Plug in the RJ45 network cable to the SNMP box.
3. Power on the UPS.
4. Confirm the LED on the SNMP box is flashing.
5. Install the software "Netility" on the computer.
6. Use the software "Netility" to scan the IP of SNMP card.
7. Start to browse the IP of SNMP card to get the status of UPS.