


SNMP Quick Configuration Guide


1. Connect a Hub and a PC as shown in the diagram below. Power on the PC, Hub and make sure the PC is running Windows.

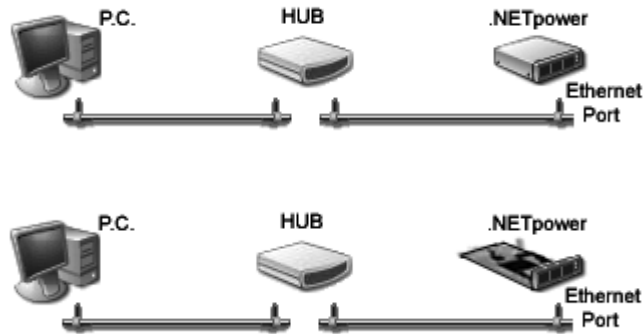

2. Make sure the .NETpower card is powered on.
3. Insert the .NETpower management CD-ROM into a CD-ROM drive.
4. Start the configuration program (smconfig.exe) on the CD-ROM to configure the .NETpower device. It will search and display .NETpower devices on a LAN and allow you to configure network settings and much more, including time settings, SNMP controls, UPS properties, etc.
(The default username is **root**, the default password is **synso**.)

SNMP Quick Configuration Guide

1. Connect a Hub and a PC as shown in the diagram below. Power on the PC, Hub and make sure the PC is running Windows.

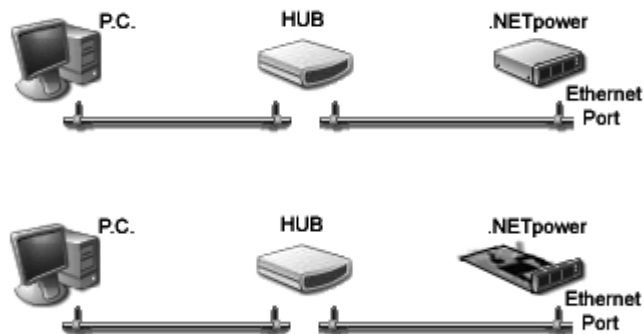

2. Make sure the .NETpower card is powered on.
3. Insert the .NETpower management CD-ROM into a CD-ROM drive.
4. Start the configuration program (smconfig.exe) on the CD-ROM to configure the .NETpower device. It will search and display .NETpower devices on a LAN and allow you to configure network settings and much more, including time settings, SNMP controls, UPS properties, etc.
(The default username is **root**, the default password is **synso**.)