



Quick Setup of the SNMP/Ethernet Card

Default IP Address: **192.168.1.254**
Subnet Mask: **255.255.255.0**

Username: **dnpower**
Password: **dnpower**

Identify your UPS (Inverter) - Where - Settings Tab / Basic Information

Configure the Temperature to °C or °F - Where - Configuration Tab / UPS Parameters

Event Actions – Notification Setups - Where – Configuration Tab / Event Actions

Change the user name and password - Where - System Tab / User

Configure the Date and Time - Where - System Tab / Date and Time

Configure the Network Settings - Where - System Tab / Network