



SNMP Card User's Manual

For cards SNMP-CY54-03 and SNMP-CY54-04

Table of Contents

1. Introduction	10
Features	10
Web-Enabled	10
Notifications	10
Scheduling	10
Security	10
Upgrades	10
SNMP	11
NMS	11
Supported LAN Protocols	11
Supported MIB Objects	11
Downloadable Software from our website	11
2. NetAgent Installation	12
NetAgent Installation	12
NetAgent 9 LED Indications	13
IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD	13
CD Description	14
3. Netility Installation & Operation	15
NetAgent Listings	16
Individual Card Information	16
Network Settings	16
IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD	17
Firmware Upgrading	19
About	19
Refresh List	19
4. NetAgent Operation	20
NetAgent Login Procedure	20
IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD	20
Web Interface Structure	21

Information Tab	22
System Status	22
System Information	22
Network Status	22
Basic Information	22
UPS information	22
Battery Information	22
Rating Information	22
Current Status	22
Input Status	22
Output Status	22
Battery Status	22
Event / Time	22
Summary	23
Contact Status	24
Remote Control	24
UPS Testing	24
Miscellaneous	25
Contact Configuration	25
Meter/Chart	25
Configuration Tab	26
UPS Configuration	26
UPS Properties	26
Battery Exhausted Charge Voltage(V)	26
UPS Communication Type (Keep as PB2000 - Only on the CY54-04 Model)	26
Date of Last Battery replacement(mm/dd/yyyy)	26
Condition of UPS Restart	26
Test Log	27
Test UPS Every (Only Available on the CY54-03 Model)	27
Start Time of UPS Test (hh:mm) (Only Available on the CY54-03 Model)	27
UPS Test Type (Only Available on the CY54-03 Model)	27

UPS Data Log	27
Warning Threshold Values.....	28
Time out after the loss of connection	28
Critical Load (%).....	28
UPS Temperature (°C)	28
Critical Capacity (%)	28
Maintenance	29
Line qualify Options	29
Battery Charging Temperature Compensation	29
Battery Low Voltage Warning	29
External Fan on/off Temperature	29
Battery Test Options.....	29
Inverter On/Off.....	29
Reset the Event/Timer Counters	29
Change Password.....	29
Transfer Points (Only Available on the CY54-04 Model).....	30
Transfer Point Descriptions.....	31
Slow Detect High Lmt	31
Slow Detect High Hyst.....	31
Slow Detect Buck High	31
Slow Detect Buck Low.....	31
Slow Detect Boost High	31
Slow Detect Boost Low	31
Slow Detect Low Hyst.....	31
UPS On/Off Schedule	32
UPS Action.....	32
Weekly Schedule.....	32
Date Schedule	32
Wake On Lan	32
Network.....	32
IPv4.....	32

IPv6.....	32
Ethernet.....	32
Dynamic DNS	33
Service Provider.....	33
Domain Name	33
Login Name.....	33
Login Password	33
PPPoE	33
SNMP	33
General	33
MIB System.....	33
System Name	33
System Contact.....	33
System Location	33
SNMP UDP Port.....	33
SNMPv3 Engine ID	34
SNMPv3 Engine ID Format Type	34
SNMPv3 Engine ID Text.....	34
SNMPv3 Engine ID content	34
Access Control.....	34
Manager IP Address	34
Version	34
Community	34
Permission.....	34
Trap Notification	34
Destination IP Address.....	34
Accept	34
Community	34
Trap Type	34
Severity	35
Description	35

Events	35
Send Power Restore and Adaptor Restore Traps for X time(s) in X second(s) Interval. ...	35
SNMP Inform Request	35
Service Connected.....	35
Device Connected.....	35
Email.....	35
Email Setting	35
Email Server	35
Enter the address of the email server.....	35
Email Port	35
Enable SSL on Email Transmission.....	36
Sender's Email Address	36
Email Server Requires Authentication	36
Account name	36
Password	36
Sending Test Mail	36
Email for Event Log	36
Email for Daily Report	37
SMS	37
SMS Setting	37
SMS Server	37
SMS Port	37
Account Name	38
Password	38
Sending test SMS.....	38
Mobile for Event Log	38
Web/Telnet/FTP	38
User account	38
User Name	38
Password	38
Permission.....	38

IP Filter	38
Auto Log Off	38
FTP Server	38
SSL Information	38
RADIUS Server Settings	39
Enable RADIUS in Web/Telnet Login	39
RADIUS Server Address	39
Authentication Port	39
Shared Key	39
Connection Timeout	39
Connection Retry	39
System Time	40
System Time	40
Time Between Automatic Updates	40
Time Server	40
Time Zone (Relative to GMT)	40
Using Daylight Saving Time	40
Rebooting the NetAgent 9 Card	41
Restart	41
Auto Restart System for Every (0 is disabled)	41
Manual Restart System After 30 seconds	41
Language	41
Interface Language	41
Email Preference	41
Log Information Tab	42
Event Log	42
Data Log	42
Battery Test Log	42
UPS Event Log	42
Help Tab	43
Search NetAgent	43

Serial Port Debug	43
Help	43
Create a Master Configuration when installing multiple NetAgent 9 cards.....	43
Save/Restore Settings	43
Save Current Configuration	43
Restore the previous configuration	43
Reset to factory default	43
Firmware Update Settings.....	43
5. Firmware Upgrading.....	44
6. Lost Password.....	45

1. Introduction

The NetAgent 9 SNMP card adds network monitoring and network management functions to your UPS. After plugging the card into your UPS and connecting it to your network, you can view the UPS's status and control the UPS over your LAN by merely entering the card's IP address into a web browser. The NetAgent 9 SNMP card also offers network management functions via SNMP NMS (Network Management System) if you prefer.

The following sections briefly describe the NetAgent 9 SNMP card:

Features

- Save and Restore card configurations
- Centralized UPS Monitoring & Management
- Real-time UPS monitoring
- Scheduling of UPS and Battering Testing
- Automatic Event and Data logging.
- Easy setup and Firmware updating via the Netility software
- Management and configuration via Telnet, Web Browser or NMS
- SNMP TRAP, E-mail and SMS messages for events notifications
- Automatically email UPS history reports
- Supports SNMP MIB to monitoring & control
- Auto-sensing of Fast Ethernet 10M /100M
- Gracefully shutdown computers with after installing the ClientMate software

Web-Enabled

The NetAgent 9 card creates a website for the UPS so that you can access the UPS via any standard web browser.

Notifications

When an event such as a power failure or a low battery condition occurs, NetAgent 9 card can notify authorized personnel/users.

Scheduling

NetAgent 9 card allows you to set up a schedule for it to initiate a self-test automatically.

Security

Support SSL/TLS, SSH Encryption. Can be restricted to authorized personnel only.

Upgrades

The firmware is easily updated using the included Netility software.

SNMP

The SNMP (Simple Network Management Protocol) is the most popular way to monitor and manage a network. Since the NetAgent 9 card supports SNMP, any SNMP NMS (Network Management System, i.e., SNMP manager) may be used to retrieve information about the UPS and control it.

NMS

The NetAgent 9 card has its own NMS, called SNMPView. You can also use another third-party NMS, such as HP OpenView, by importing its MIB file.

Supported LAN Protocols

TCP/IP, HTTP, HTTPS, SSL, SSH, SMTP, SNTP, DHCP, Telnet, BOOTP, DNS, DDNS, RADIUS, IPv4, IPv6

Supported MIB Objects

PPC MIB, RFC1628, SNMPv1, SNMPv2, SNMPv3

Downloadable Software from our website

Netility is tool software that helps the user to search for all the available NetAgent 9 cards within your LAN, as well as to configure IP addresses and upgrade firmware.

SNMPView is an NMS software program used to monitor and control multiple NetAgent 9 cards. With SNMPView, you can view a UPS's location, output status node, battery capacity, AC status, and battery status and other parameters of all your UPSs, in one window. Plus, you can also configure the UPS to perform self-tests and send history files and more.

iMConfig is software that allows a user to change the same parameter on multiple NetAgent cards simultaneously.

SMS Server Software allows the NetAgent 9 card to communicate with an SMS Server, enabling event notifications to be sent via SMS messaging.

ClientMate provides a client-based shutdown utility that can safely shutdown any computers on the LAN. Since the UPS can supply power to many computers, it may be necessary to shut down more than one computer before turning off the UPS. When the UPS is in AC failure condition or Battery Low condition, the NetAgent 9 SNMP card sends out a Shutdown signal to the computers on the LAN. Each computer on the LAN that has the ClientMate Software installed will then automatically close all the files of the operating system and shutdown gracefully, avoiding system/file corruption.

2. NetAgent Installation

NetAgent Installation



Find INTELLIGENT SLOT on UPS and remove the panel



Insert NetAgent into the slot and fit into the connector



Screw lock on the two sides



Connect LAN cable



Turn ON UPS



NetAgent 9 LED Indications


SNMP-CY54-03



SNMP-CY54-04



RJ45 Port

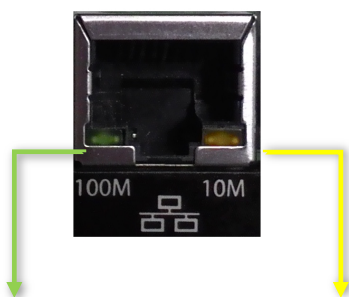

Green		Yellow	
On	Flashing	On	Flashing
100 Mbps	Sending / Receiving Data	10 Mbps	Sending / Receiving Data

LED Status


Status	Power On	Lost Communication	Writing Firmware
Yellow 	On	On	Off
NetAgent 9 Status Red 	Off	Flashing	Flashing
UPS Communication Green 	On	On	On
Power			

NOTE: When writing firmware, red led alternating flashing, DO NOT remove any power.


IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD

The default IP addressing method for the NetAgent SNMP Card is DHCP. It is important when using DHCP that there is a router or switch that has DHCP enabled between the NetAgent SNMP Card and your computer.

CD Description

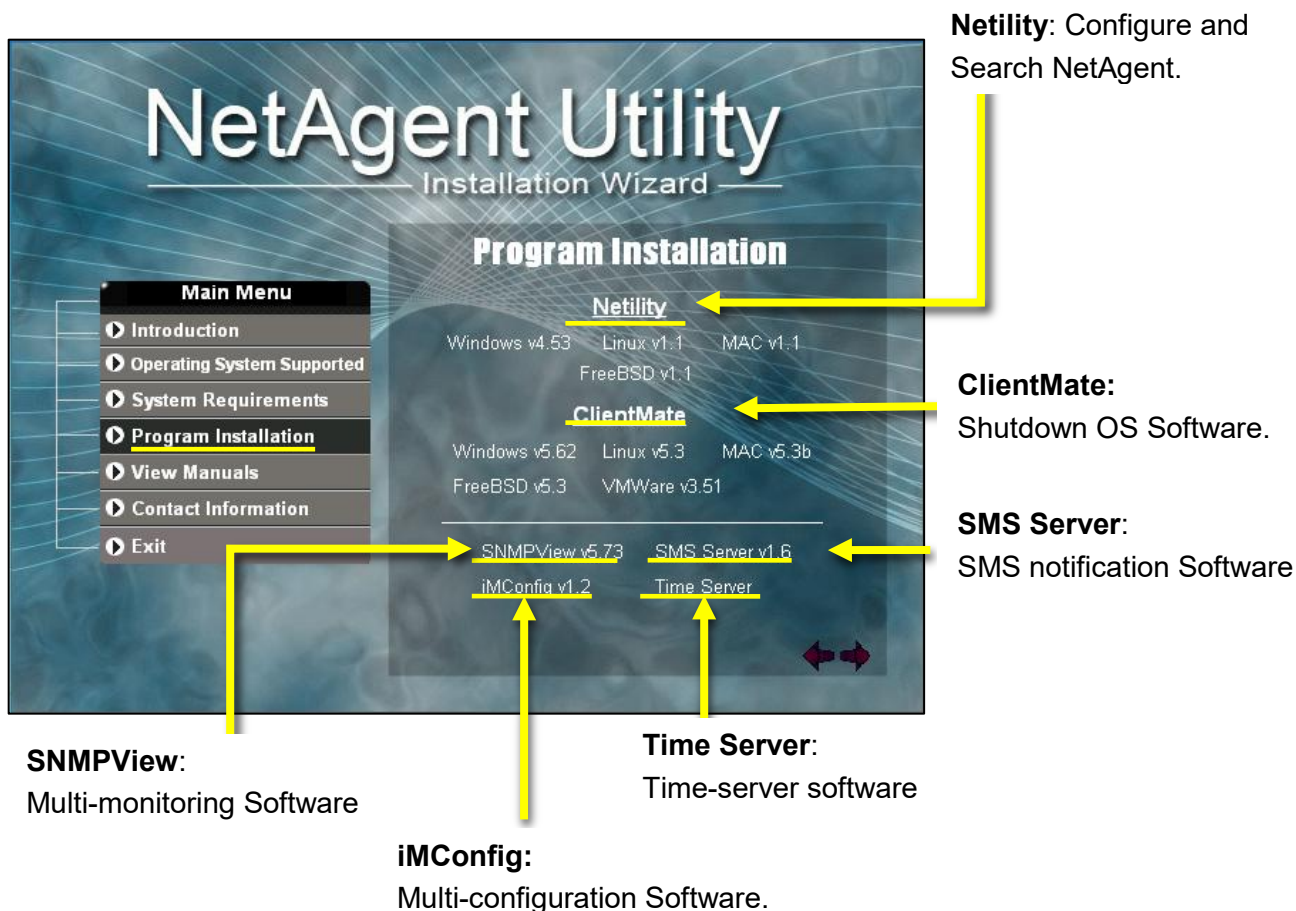


NetAgent Utility CD offers several, management and shutdown software programs. Insert the CD into CD-ROM and select the software to install. If the PC does not execute the CD program automatically, please select the program from the CD.

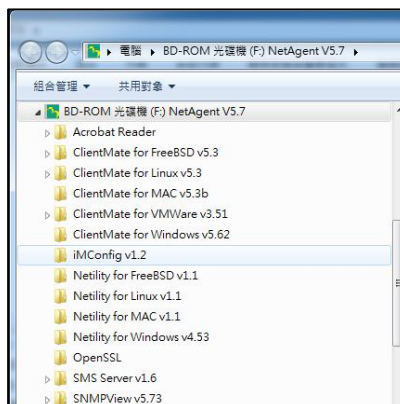

3. Netility Installation & Operation

Netility is a software program that helps the user to search for all the available NetAgent SNMP cards on its network. Configure individual IP addresses and upgrade firmware.

The Netility main page has two sections, a functional selection, and the Online NetAgent List.

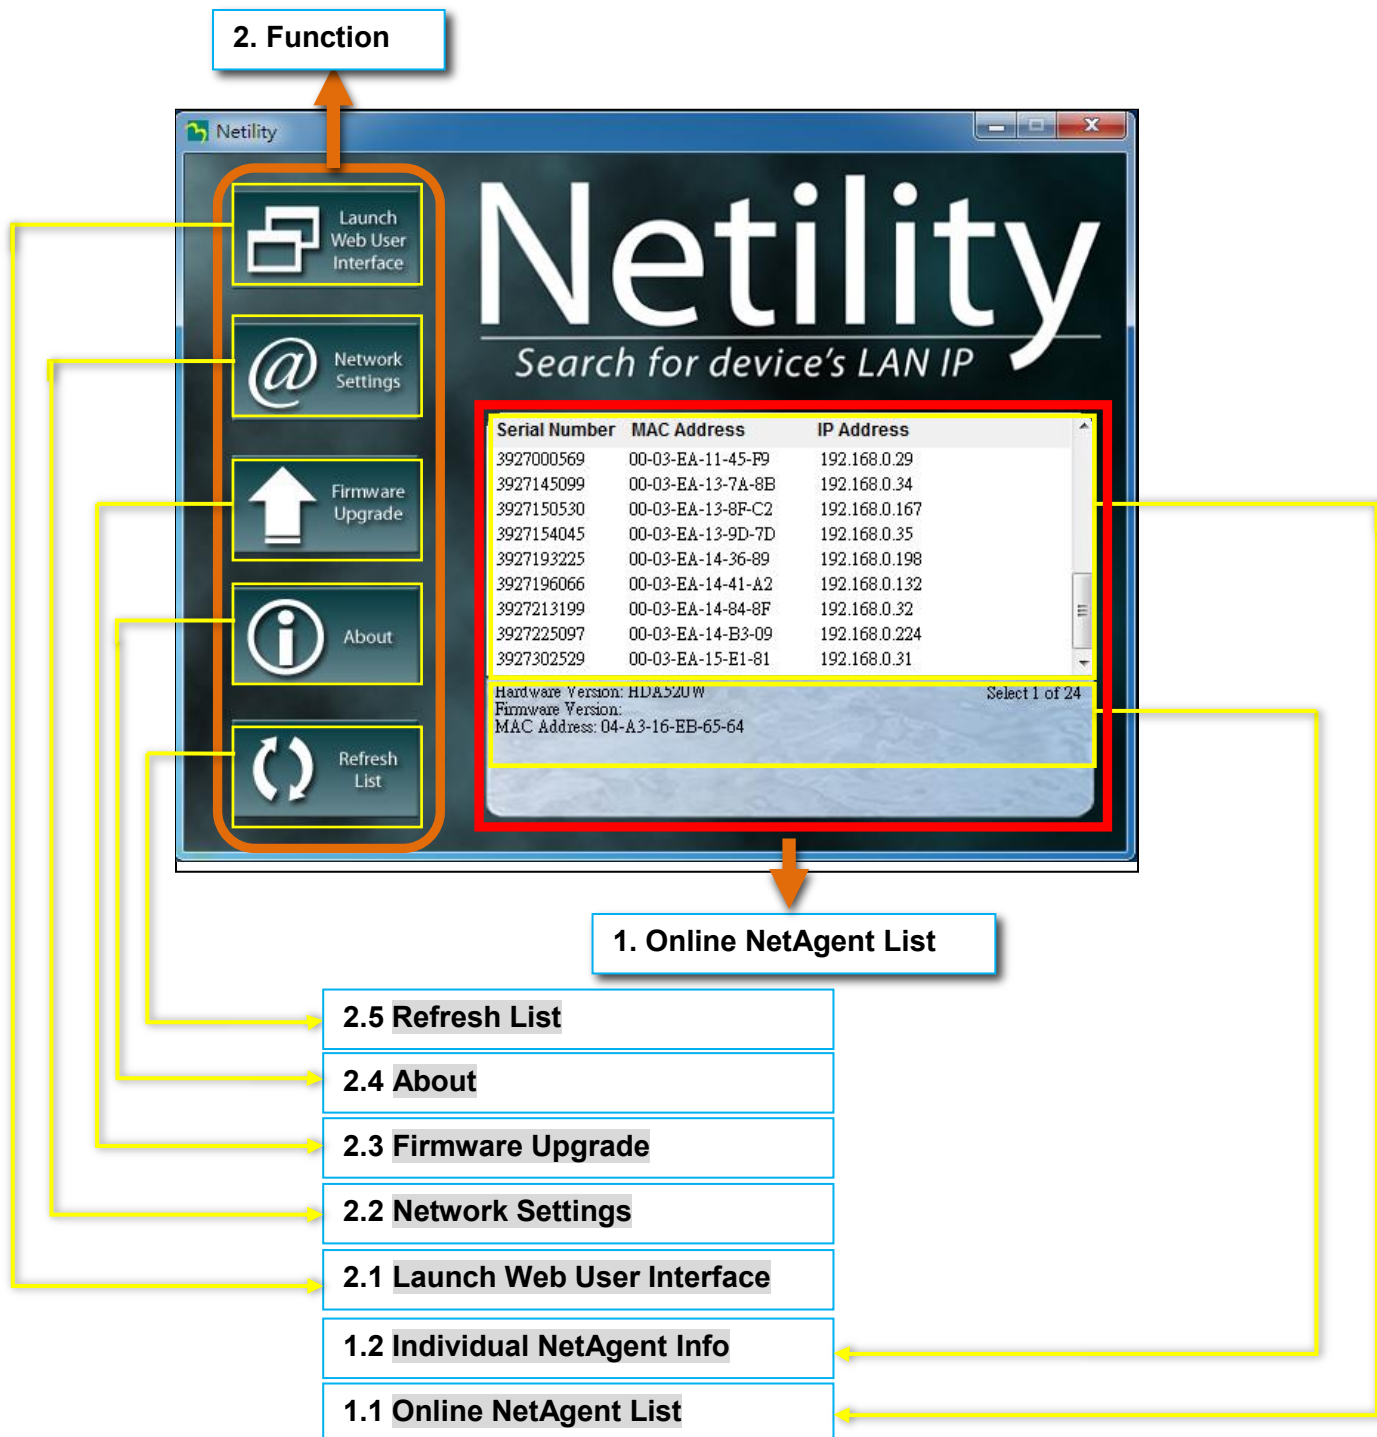

NOTE:

Each NetAgent has its unique serial number / MAC address and Password shown on the label of each card. This label will help to identify the card information on Netility.

**NetAgent Listings**

When you start up Netility, it automatically searches all the available online NetAgent cards within its network, listing its serial number, IP address, MAC address. (The list refreshes automatically every 2 minutes)

Double clicking on the specific NetAgent card takes you to the card's webpage.

Individual Card Information

Single clicking on a specific NetAgent card, displays the cards hardware version, firmware version and MAC address at the bottom of the page.

Select a specific NetAgent from the list and click on Launch Web User Interface to log in to the NetAgent's webpage.

Network Settings

When selected to obtain an IP address by DHCP or BOOTP, the IP address and other network parameters are assigned by the network router.


NetAgent offers 4 network protocols - HTTP / HTTPS / TELNET / SSH for management with security consideration. If any change on port number, it requires you to enter the full IP address with the port number to log in.

Example: HTTP port number change to 81

The full address to be entered in a browser would be "http://X.X.X.X:81" (X.X.X.X is the IP address of the NetAgent)


Example: Telnet port number change to 24

The full address to be entered on HyperTerminal would be "http://X.X.X.X 24" (X.X.X.X is the IP address of the NetAgent)


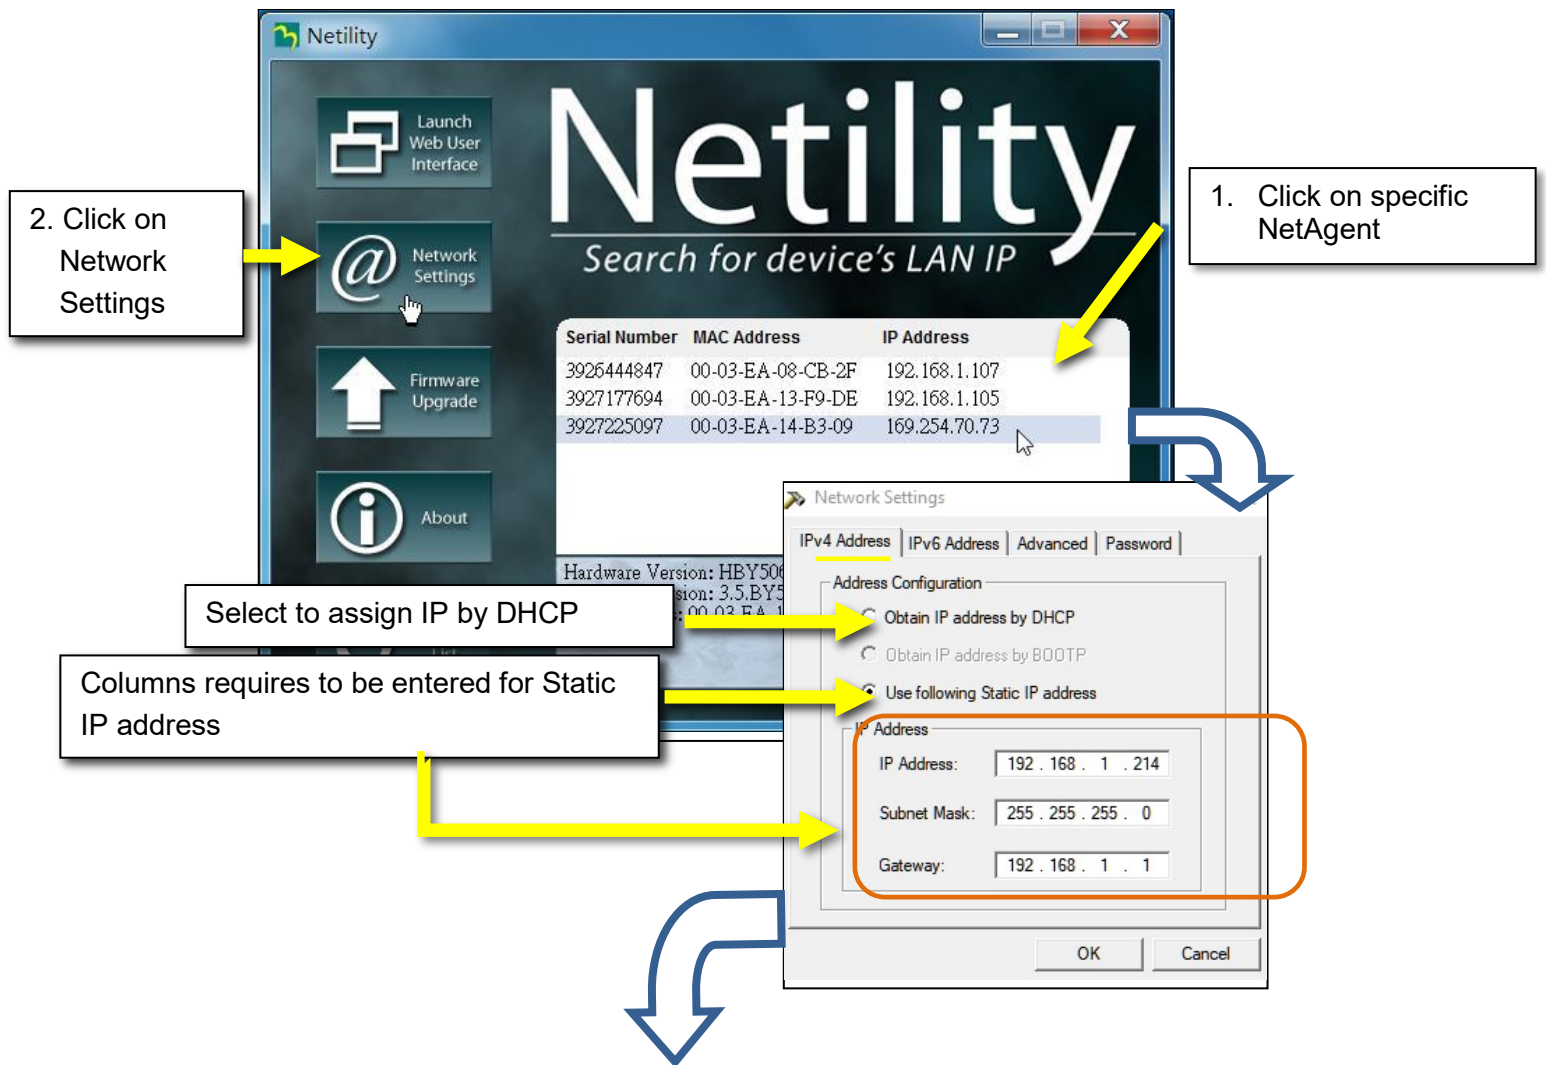


IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD

The default IP addressing method for the NetAgent SNMP Card is DHCP. It is important when using DHCP that there is a router or switch that has DHCP enabled between the NetAgent SNMP Card and your computer.

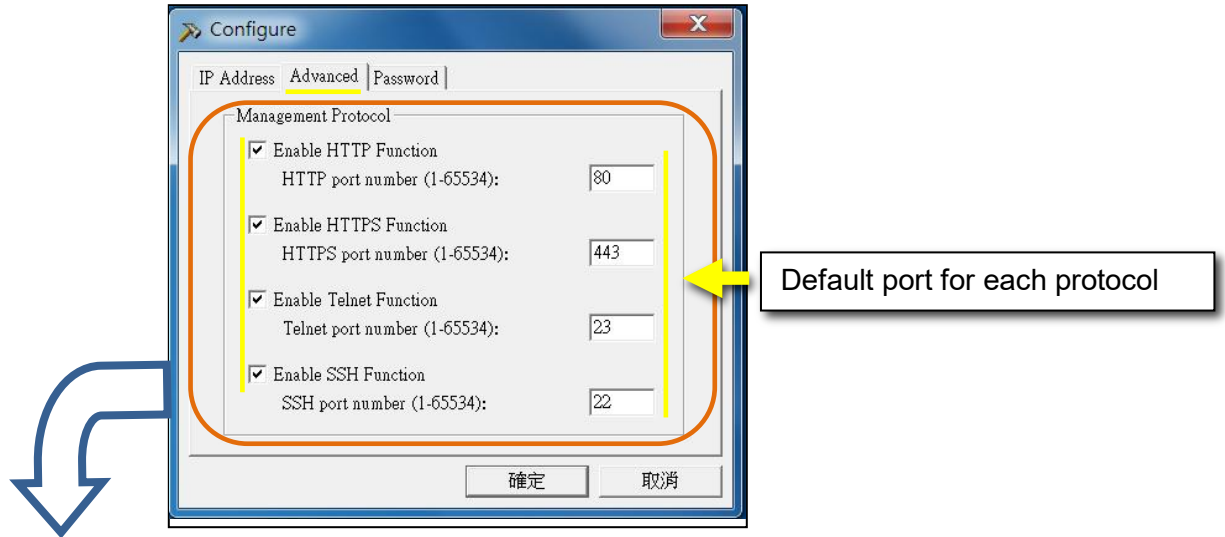

Once password is enabled and configured, it is required to enter the correct password when change any setting or firmware upgrade

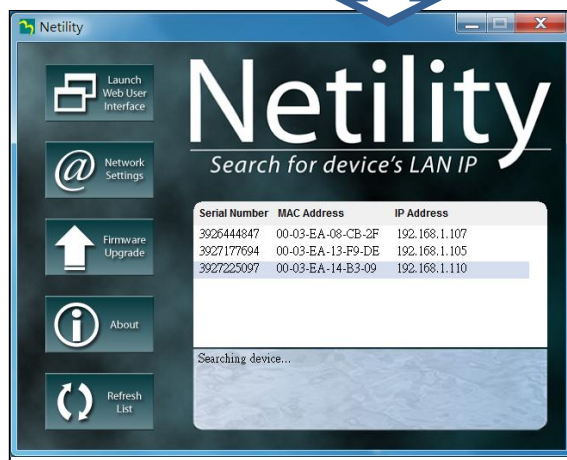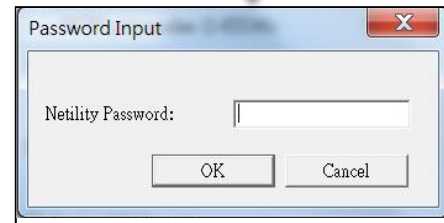

IMPORTANT TO READ!

The firmware available for download from the MegaTec web site is not 100% compatible with our products. Our products use a custom (OEM) firmware version developed by MegaTec specifically for our products.

Firmware Upgrading

There are two methods for updating the firmware on your NetAgent 9 card, the Netility software program explained below and using the built-In firmware updater located under the Help Tab/About/Firmware Updating Settings explained on page 44.

This section explains using Netility to upgrade or re-load the firmware to the NetAgent 9 card. Using Netility requires having a BIN file. Be sure to check that the NetAgent model, hardware version for the correct firmware version (.bin) before upgrading the NetAgent firmware. You can contact us directly at support@marathon-power.com for the latest version of the firmware for your SNMP card.

Using the list of NetAgent cards shown in Netility, click on the specific NetAgent card you want to upgrade. Then click on “Firmware Upgrade” on the left-side of the screen. A pop-up will ask to search to the correct Bin file stored on your computer. Click on the file. After the file has loaded, click on “Download”. **WARNING:** While upgrading, red and yellow LEDs flash. DO NOT remove any power or cable to the NetAgent. After upgrading, the NetAgent reboots automatically.

When you see text that the upgrade was successful, click on “Cancel” If a failure occurs during firmware upgrading, click on “Abort”. **Be sure that the firmware model number and the card’s model number match before trying again.**

Holding the CTRL key when selecting NetAgent 9 card from the list, will allow you to upgrade multiple cards once. **Be sure that the firmware model number and the card’s model number match.**

About

Here shows the current Netility version.

Refresh List

The list on Netility would refresh every 2 minutes automatically. However, a manual refresh is also possible by clicking the “Refresh List.”

4. NetAgent Operation

NetAgent Login Procedure

1. Connect NetAgent to modem / router
2. Install Netility under same network
3. NetAgent searches all available NetAgent within same network
4. Configure IP address of NetAgent (1) DHCP IP (Default) (2) Static IP
5. Enter IP address of the NetAgent on browser.
Double click NetAgent from Netility.
Login via HyperTerminal.
6. Select the compatible protocol under UPS Configuration webpage of NetAgent
7. Enter other network parameters on this webpage

IMPORTANT NOTE ABOUT CONNECTING TO THE NETAGENT SNMP CARD

The default IP addressing method for the NetAgent SNMP Card is DHCP. It is important when using DHCP that there is a router or switch that has DHCP enabled between the NetAgent SNMP Card and your computer.

Web Interface Structure

Information
System Status
Basic Information
Current Status
Remote Control
Meter / Chart
Configuration
UPS Configuration
UPS On / Off Schedule
Network
SNMP
Email
SMS
Web / Telnet
System Time
Language
Log Information
Event Log
Data Log
Battery Test Log
Help
Search NetAgent
Serial Port Debug
Help
About

Information Tab



System Status

System Information

This shows all the necessary information about the NetAgent card such as hardware/firmware version; Serial Number; Uptime...etc.

Network Status

This shows the network information and configuration.

Basic Information

UPS information

Battery Information

Rating Information

Current Status

This page shows the current UPS Input / Output and Battery Status. Status refresh time can be configurable. When an abnormal condition occurs, it shows in red

Input Status

Output Status


Battery Status

Event / Time (Only Available on the CY54-04 Model)



EVT/TIMER		
INV Event	00019	The numbers of Input Power Failures
INV Timer	0000 Hours 07 Minutes	The total discharge time that the battery since the last RESET
BUCK Event	00000	The numbers of BUCK function active
BUCK Timer	0000 Hours 00 Minutes	Total time that the BUCK function since the last RESET
BOOST Event	00000	The numbers of BOOST function active
BOOST Timer	0000 Hours 00 Minutes	Total time that the BOOST function since the last RESET

Summary (Only Available on the CY54-04 Model)

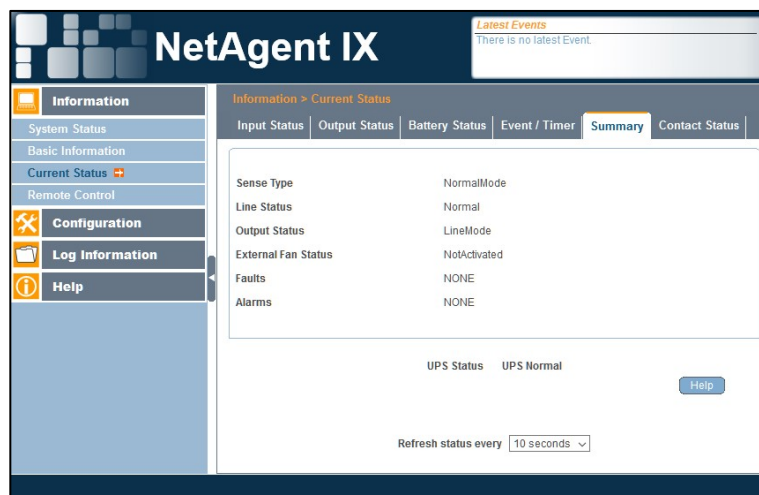

Contact Status (Only Available on the CY54-04 Model)



The screenshot shows the NetAgent IX interface. On the left is a navigation menu with 'Information' (System Status, Basic Information, Current Status, Remote Control), 'Configuration', 'Log Information', and 'Help'. The main area is titled 'Information > Current Status' and has tabs for 'Input Status', 'Output Status', 'Battery Status', 'Event / Timer', 'Summary', and 'Contact Status'. The 'Contact Status' tab is active, displaying a table of contact statuses:


Contact	Status
Contact C1	[On Batt](NotActivated)
Contact C2	[On Batt](NotActivated)
Contact C3	[Lo Batt:47.5Volts](NotActivated)
Contact C4	[Lo Batt:47.5Volts](NotActivated)
Contact C5	[Timer:2.00Hours](NotActivated)
Contact C6	[Timer:2.00Hours](NotActivated)
Program IIP Contact	[Self_test](NotActivated)

Below the table, it shows 'UPS Status: UPS Normal' and a 'Refresh status every' dropdown set to '10 seconds'. A 'Help' button is also present.

Remote Control

Here, the user can perform several tests on the UPS or Batteries remotely. Once the option is selected, clicking Apply executes it.


UPS Testing

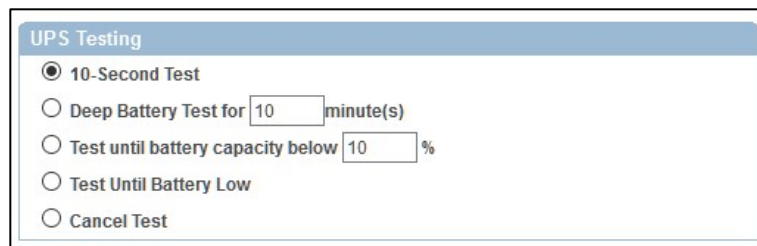

The 'UPS Testing' dialog box contains the following options:

- ☒ 10-Second Test
- ☐ Deep Battery Test for minute(s)
- ☐ Test until battery capacity below %
- ☐ Test Until Battery Low
- ☐ Cancel Test

Additional Tests are available under the Configuration Tab / UPS Configuration / Test Log

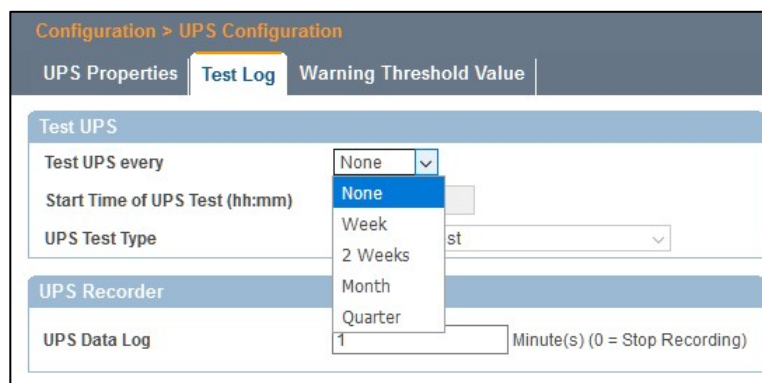

The screenshot shows the 'Configuration > UPS Configuration' section with the 'Test Log' tab selected. It includes a 'Test UPS' section with a dropdown for 'Test UPS every' (set to 'None'), a 'Start Time of UPS Test (hh:mm)' field, and a 'UPS Test Type' dropdown. Below this is a 'UPS Recorder' section with a 'UPS Data Log' field and a 'Minute(s) (0 = Stop Recording)' field.



This section is used to change the alarm assigned to individual Dry Contacts.

Initial Self-Test (Only Available on the CY54-04 Model)

This initializes a 1-minute Self-Test.

WARNING! Using this remote Self-Test resets the duration of the manual Self-Test done by using the UPS's front panel to 1-Minute.

Contact Configuration (Only Available on the CY54-04 Model)

This section is used to change the alarm message sent by each individual Dry Contact.

Meter/Chart (Only Available on the CY54-03 Model)

Shows UPS Input, Output, Temperature, and Frequency in graphic or chart. Java is required

Configuration Tab

The screenshot shows the NetAgent IX web interface. The left sidebar contains a navigation menu with 'Information' and 'Configuration' sections. The 'Configuration' section is expanded, showing 'UPS Configuration' as the selected item. The main content area is titled 'Configuration > UPS Configuration' and has three tabs: 'UPS Properties', 'Test Log', and 'Warning Threshold Value'. The 'UPS Properties' tab is active, displaying a form with the following fields:

UPS Properties	
UPS Communication Type	MegaTec
Number of Batteries	2
Battery Full Charge Voltage (V)	2.267
Battery Exhausted Charge Voltage (V)	1.667
Date of Last Battery Replacement (mm/dd/yyyy)	

Condition of UPS Restart	
Battery Capacity	0 %
Waiting Time	30 second(s)

At the bottom of the form are three buttons: 'Apply', 'Reset', and 'Help'.

UPS Configuration

UPS Properties

Do Not change any of these settings. The standard MegaTec firmware was customized to work with our UPSs using these settings. Changing these settings will alter the functionality of the card. Except for entering the “Date of Last Battery replacement(mm/dd/yyyy)”

Number of Batteries (Only Available on the CY54-03 Model)

3 is the default setting; Do not change this setting.

Battery Full Charge Voltage (V) (Only Available on the CY54-03 Model) 2.267 is the default setting; Do not change this setting.

Battery Exhausted Charge Voltage(V)

1.667 is the default setting; Do not change this setting.

UPS Communication Type (Keep as PB2000 - Only on the CY54-04 Model)

Date of Last Battery replacement(mm/dd/yyyy)

Condition of UPS Restart

ID Name (Only Available on the CY54-04 Model)

Attached Device (Only Available on the CY54-04 Model)

Test Log

Here, the user can perform several tests on the UPS and the batteries remotely. Once the option is selected, clicking Apply executes it.

The screenshot shows the 'Configuration > UPS Configuration' page with the 'Test Log' tab selected. The 'Test UPS' section includes a dropdown for 'Test UPS every' (currently set to 'None'), a text input for 'Start Time of UPS Test (hh:mm)', and a dropdown for 'UPS Test Type' (currently set to 'None'). The 'UPS Recorder' section includes a text input for 'UPS Data Log' (set to '1') and a text input for 'Minute(s) (0 = Stop Recording)' (set to '1').

Test UPS Every (Only Available on the CY54-03 Model)

Week / 2 Weeks / Month / Quarter UPS can be selected

Additional Tests are available under the Information Tab / Remote Control

The screenshot shows the 'UPS Testing' section with the following options:

- ☒ 10-Second Test
- ☐ Deep Battery Test for minute(s)
- ☐ Test until battery capacity below %
- ☐ Test Until Battery Low
- ☐ Cancel Test

Start Time of UPS Test (hh:mm) (Only Available on the CY54-03 Model)

To enter the time to begin the test

UPS Test Type (Only Available on the CY54-03 Model)


Test option can be select from the drop-down list

UPS Data Log

To adjust how often the SNMP card retrieves new data from the UPS.

The screenshot shows the 'UPS Recorder' section with a text input for 'UPS Data Log' (set to '1') and a text input for 'Minute(s) (0 = Stop Recording)' (set to '1').

Warning Threshold Values (Only Available on the CY54-03 Model)

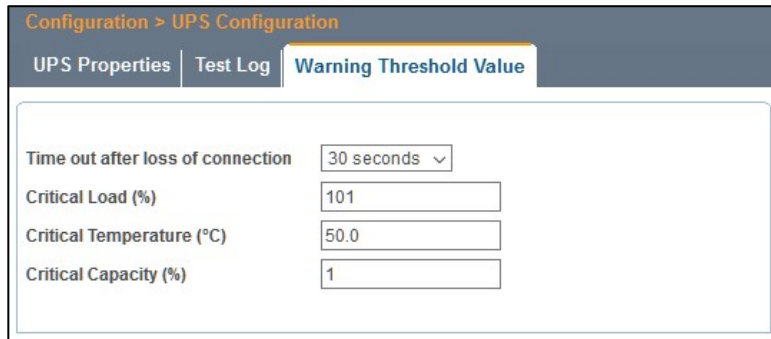

The screenshot shows a web interface for configuring a UPS. At the top, there is a breadcrumb trail 'Configuration > UPS Configuration'. Below this, there are three tabs: 'UPS Properties', 'Test Log', and 'Warning Threshold Value', with the third tab being the active one. The main content area contains four configuration items, each with a label and a corresponding input field:

Configuration Item	Value
Time out after loss of connection	30 seconds (dropdown menu)
Critical Load (%)	101
Critical Temperature (°C)	50.0
Critical Capacity (%)	1

Time out after the loss of connection

If the NetAgent and UPS loss communication, the NetAgent sends a warning alarm at this configured time

Critical Load (%)

When loading reaches this % configured, the NetAgent sends a warning alarm

UPS Temperature (°C)

When the UPS temperature reaches this degree configured, the NetAgent sends a warning alarm

Critical Capacity (%)

When UPS battery capacity reaches this % configured, NetAgent sends a warning alarm

Maintenance (Only Available on the CY54-04 Model)

The screenshot shows the NetAgent IX web interface. The left sidebar contains a navigation menu with sections: Information, Configuration, Log Information, and Help. Under Configuration, there are links for UPS Configuration, Network, SNMP, Email, SMS, Web/Telnet/FTP, System Time, and Language. The main content area is titled 'Configuration > UPS Configuration' and has tabs for 'UPS Properties', 'Test Log', 'Maintenance' (which is selected), and 'Transfer Point'. The 'Maintenance' tab contains several configuration sections: 'Line Quality Options' with a 'Line Quality' dropdown set to '30' and 'seconds'; 'Battery Charging Temperature Compensation' with a 'Compensation value' dropdown set to '-3.0' and 'mV/°C/Cell'; 'Battery Voltage Low Warning' with an 'Enter new value' input set to '47.5' and 'V'; 'External On/Off By Temperature' with a 'Temperature set to (20-55)' input set to '25' and '°C'; 'Battery Test Options' with a 'Test period time (1-255)' input set to '1' and 'Minute(s)', and a 'Test Switch to' section with radio buttons for 'On' and 'Off'; 'Inverter On/Off' with an 'Inverter switch to' section and radio buttons for 'On' and 'Off'; 'Reset The Event/Timer Counters' with a 'Reset The Counters' checkbox and a 'Reset' button; and 'Change Password' with 'Current Password' and 'New Password' input fields. At the bottom right of the main content area are buttons for 'Apply', 'Reset', and 'Help'. A 'Latest Events' box at the top right of the main content area states 'There is no latest Event.'

Line Qualify Options

Battery Charging Temperature Compensation

Battery Low Voltage Warning

External Fan on/off Temperature

Battery Test Options

WARNING! Using this remote Self-Test resets the duration of the manual Self-Test done by using the UPS's front panel to the value entered.

Inverter On/Off

This setting turns the output of the UPS On or Off.

Reset the Event/Timer Counters

Change Password

Transfer Points (Only Available on the CY54-04 Model)

The screenshot displays the NetAgent IX web interface. The top header shows the 'NetAgent IX' logo and a 'Latest Events' section indicating 'There is no latest Event.' The left sidebar contains navigation tabs: 'Information', 'Configuration', 'Log Information', and 'Help'. The 'Configuration' tab is active, showing a sub-menu with 'UPS Configuration', 'Network', 'SNMP', 'Email', 'SMS', 'Web/Telnet/FTP', 'System Time', and 'Language'. The 'UPS Configuration' sub-menu is expanded, showing 'UPS Properties', 'Test Log', 'Maintenance', and 'Transfer Point'. The 'Transfer Point' sub-menu is selected, displaying the following settings:

High Transfer Point Setting	
High Limit Point (120-150V)	150 V
High Hyst Point	145 V
High Gap (3-7V)	5 V

Buck Transfer Point Setting	
Buck High Point (120-144V)	130 V
Buck Low Point	125 V

Boost Transfer Point Setting	
Boost High Point	107 V
Boost Low Point (96-120V)	102 V

Low Transfer Point Setting	
Low Limit Point (90-120V)	90 V
Low Hyst Point	95 V
Low Gap (3-7V)	5 V

AVR Feature Setting	
Buck Feature	<input checked="" type="radio"/> On <input type="radio"/> Off
Boost Feature	<input checked="" type="radio"/> On <input type="radio"/> Off

At the bottom right of the configuration area, there are three buttons: 'Apply', 'Reset', and 'Help'.

This option allows the user to change various detection and warning levels for input AC voltages, qualified and unqualified values, Transfer & Retransfer set points for going in & out of Battery mode / Boost / Buck modes. The factory set default values concur with those specified by DOTs (Department of Transportations).

Electrical equipment is designed to operate at maximum efficiency at a specific standard supply voltage. Buck and boost is an ideal solution when the line voltage is consistently higher or lower than nominal. The transformer can buck (lower) or boost (raise) the supply voltage without having to go onto battery or involve any other active TRTC-2004-N1 board level components.

The TRTC-2004-N1 input transformer has a second tap off the primary winding. When enabled the transformer automatically switches to the secondary tap to buck or boost the voltage output 10%, thereby keeping the output within an acceptable range.

Transfer Point Descriptions

All levels are user programmable; some values are interdependent.

Slow Detect High Lmt

When input voltage exceeds this level, TRTC-2004-N1 transfers to Battery Mode from either Buck Mode (when enabled) or Line mode.

Slow Detect High Hyst

When input voltage returns below this level, TRTC-2004-N1 transfers back to Line Mode from Battery Mode.

Slow Detect Buck High

When input voltage exceeds this level, TRTC-2004-N1 transfers to Buck Mode (when enabled) this reduces the output.

Slow Detect Buck Low

When input voltage returns below this level, TRTC-2004-N1 releases the Buck Mode (when enabled) and transfers back to Line Mode.

Slow Detect Boost High

When input voltage returns above this level, TRTC-2004-N1 releases the Boost Mode (when enabled) and transfers back to the Line Mode.

Slow Detect Boost Low

When input voltage reduces below this level, TRTC-2004-N1 transfers to Boost Mode (when enabled) increasing the output.

Slow Detect Low Hyst

When input voltage returns above this level, TRTC-2004-N1 transfers back to the Line Mode from Battery Mode.

	Range	Effect. Lower Limit	Effect. Upper Limit	Buck On Boost On	Buck Off Boost Off
Hi Lmt	120-150	120	150	150	130
Hi Buck	120-144	120	144	130	125
High gap	3-7	3	7	5	5
Low gap	3-7	3	7	5	5
Lo Boost	96-120	96	120	102	105
Lo Lmt	90-120	90	120	90	100

UPS On/Off Schedule (Only Available on the CY54-03 Model)

We do not recommend scheduling the UPS to turn On or Off. Doing so may result in the loss of functionality of the UPS.

UPS Action

When the selected event occurs at the configured time range, the UPS shuts down after the configured time.

Weekly Schedule

This section is to set the time to turn on/off the UPS for each day in the week.

Date Schedule

This section is to set the time to turn on/off the UPS on a particular day(s). (e.g., holidays.) The settings here override the settings in Weekly Schedule.

“Warming will be initiated (configurable) before a Schedule shutdown event.”

The NetAgent sends a warning message before a scheduled shutdown. This section sets the delay period before the scheduled shutdown starts.

Wake On Lan

This section is to wake a PC within the network after AC recovery, or when the battery capacity reaches the configured %. (Make sure this functionality is supported on the device and enabled in BIOS.) Enter the IP address of the device for the NetAgent to communicate with the device.

Network

IPv4

How the IP address is obtained is selected by a drop-down list with the options of manually, using DHCP, or BOOTP. If the IP address and DNS were configured using Netility, then the information is visible here.

IPv6

All NetAgent 9 series supports IPv6. How the IP address is obtained by is selected by a drop-down list with the options of (Automatic Stateless DHCPV6/DHCPV6/Manual). Clicking Apply reboots the NetAgent.

Ethernet

Connection Type

This section is to set communication speed between NetAgent and Network.

Clicking Apply reboots the NetAgent.

Stop UPS communication when Ethernet disconnected

This is to set if you want to stop UPS communication when NetAgent disconnects with

Ethernet

Dynamic DNS

This is a service that allows the user to alias a dynamic IP address to a static hostname. Be sure that the account and password are registered with the DDNS service provider.

Service Provider

Dynamic DNS providers can be select from the list

Domain Name

This is the Domain Name you have created from the above selected DDNS provider

Login Name

This is the Login / Account name that you have created with the selected DDNS provider.

Login Password

Enter the Password you have assigned to your DDNS Account. Use an external STUN server to get Public IP to register

Use an external STUN server to get Public IP to register

Choose Yes to ensure that NetAgent uses the WAN / Public IP to update the selected DDNS server

PPPoE

Use this option to allow NetAgent to connect to the Internet directly using your xDSL modem by PPPoE. Enter the Login name and password to enable the connection. Once set-up, the NetAgent will connect directly to your LAN, any abnormal connection failure will cause a re-dial

SNMP

This page is to set the NetAgent SNMP settings so that it can be used by an NMS (Network Management System). (SNMPView, is available on the NetAgent Utility CD.)

General

MIB System

System Name

System Contact

System Location

SNMP UDP Port

The port that NetAgent receives and send SNMP command. (Default is 161)

Trap Receive Port. The port to receive a trap. (Default is 162)

SNMPv3 Engine ID

SNMPv3 Engine ID Format Type

When using SNMPv3, NetAgent requires to have its Engine ID for identification to generate authentication and encryption key. Format type can be selected from the drop-down list with the options of MAC Address / IPv4 / IPv6 / Manual. Clicking on Apply reboots the NetAgent card.

SNMPv3 Engine ID Text

SNMPv3 Engine ID content


Access Control

Manager IP Address

This is to set the IP address that an administrator can use to manage NetAgent. It is valid for up to 8 IP addresses. To manage NetAgent from any IP address, enter *.*.*.* into Manager IP address.

Version

This is to select between SNMPv1 & SNMPv2 or SNMPv3 (SNMPv3 only applies to NetAgent 9 series) When selecting All and V3, user name, password, authentication, and privacy are required. Clicking on the >>, opens the SNMPv3 settings.

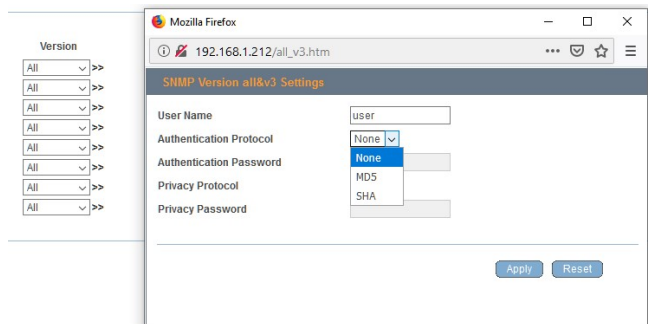

Community

This section is to set a Community name for NMS. The community name has to be the same as the setting in NMS. (Default is public)

Permission

This section is to set authorities of administrators. Options are Read, Read/Write, and No Access.

Trap Notification

Destination IP Address

To set receiver's IP address for receiving traps sent by NetAgent. It is valid for up to 8 IP addresses.

Accept

Select the trap type of its SNMP version or Inform from the drop-down list. When SNMPv3 trap or SNMPv3 Inform is selected, username/password and authentication information are required.

Community

Trap receiver and NetAgent must be the same community. (Default is public)

Trap Type

Select from PPC MIB or RFC1628 MIB (Default is PPC)

MIB file is available by contacting Marathon Power at support@marathon-power.com

Severity

This section is to set Trap level for each receiver.

There are three levels,

1. Information: To receive all the traps.
2. Warning: To receive only “warning” and “severe” traps.
3. Severe: To receive only “severe” traps. (Please refer to NMS manual for Trap levels.)

Description

This is to make a note for an administrator’s reference

Events

This is to select events for NetAgent to send traps. Click on Select to show the full Events List. Click on Test to send a test trap to ensure all setting is correct.

Send Power Restore and Adaptor Restore Traps for X time(s) in X second(s) Interval.

This is to set the number of times per second traps are sent when the power is restored. This is to check if the communication between trap receiver and NetAgent remains well or not after power recovery.

SNMP Inform Request

This is to set the number of times that the NetAgent can request a response from the sending Inform host with a preset value. (Default is 3 times and an interval of 5 seconds)

Service Connected

This section is to set the usage power and connection status of other devices which connects to the same UPS as NetAgent uses.

Device Connected

Email

To send an email notification when an event occurs or data log

Email Setting

Email Server

Enter the address of the email server

Email Port

Email Port that it uses for sending email Enable SSL on Email Transmission

Select SSL type for email transmission

Type of encryption that the NetAgent model supports

Sender's Email Address

To enter the email address that for sending email

Email Server Requires Authentication

If such as an email server requires authentication or not

Account name

If authentication is required, enter its account name

Password

If authentication is required, enter its password

Sending Test Mail

Enter email address to check all configuration is correct or not to receiving mail

Email for Event Log

To set the email addresses of who will receive an event email sent by NetAgent when a selected event occurs. It is valid for up to 8 Email addresses.

Select Event

UPS Events

	YES	NO
Schedule Shutdown Event	<input checked="" type="radio"/>	<input type="radio"/>
UPS Failure	<input checked="" type="radio"/>	<input type="radio"/>
UPS entering Test mode	<input checked="" type="radio"/>	<input type="radio"/>
UPS entering Sleeping mode	<input checked="" type="radio"/>	<input type="radio"/>
UPS entering Boost mode	<input checked="" type="radio"/>	<input type="radio"/>
UPS Load Overrun	<input checked="" type="radio"/>	<input type="radio"/>
UPS Communication Lost	<input checked="" type="radio"/>	<input type="radio"/>
Turn Off UPS	<input checked="" type="radio"/>	<input type="radio"/>
AC Power Failed	<input checked="" type="radio"/>	<input type="radio"/>
UPS Battery Low	<input checked="" type="radio"/>	<input type="radio"/>
UPS Temperature Overrun	<input checked="" type="radio"/>	<input type="radio"/>
UPS Capacity Underrun	<input checked="" type="radio"/>	<input type="radio"/>
UPS entering Bypass mode	<input checked="" type="radio"/>	<input type="radio"/>

Select All

Clear All

Apply

Email for Daily Report

This section is to set the recipients of the NetAgent's Daily Report. The report is sent at a pre-set time. It is valid for up to 4 Email addresses. The Daily report with content of event and data log. With NetAgent series, the option is available if to send an email when an event or data log overflows to 500 logs.

SMS

When a UPS event occurs, this allows an SMS to be sent using a GSM/GPRS/CDMA Modem. Operation information is as below for single port NetAgent.

SMS Setting

SMS Server

When a modem is connected to a PC with SMS Server software installed
(Refer to SMS Server section for SMS Server Software installation)
Enter the IP address of the SMS Server. (The PC that installed SMS Server Software)

SMS Port

Enter the port number that SMS Server uses for sending SMS. (Port 80 is default)

Account Name

Enter SMS Server's account name if required

Password

Enter SMS Server's password if required

Sending test SMS

When modem and configuration are ready, enter a mobile number to receive a test SMS message.

Mobile for Event Log

To set the recipient's mobile number for SMS notification when an event occurs. A total of 8 mobile numbers can be assign.

Web/Telnet/FTP

To set permission for each user account for Web and Telnet access. It is valid for up to 8 users.

User account

User Name

To set a password for NetAgent Web and Telnet access.

Password

To set a password for NetAgent Web and Telnet access.

Permission

To set No Access / Read/ Read/Write)

Permission Rule At least one user account must be Read/Write

Permission Rule: User name with Read and Write cannot be blank

IP Filter

The only specific IP address could log in to NetAgent means any IP address

Auto Log Off

NetAgent webpage logs off automatically if it idle for the preset value. *Auto Logoff after Idle for X minutes. (0 is disabled)*

FTP Server

SSL Information

NetAgent supports HTTPS protocol and varies SSL encryptions version for network connection. The user may upload its Public Key and Certification for authentication.

Below are the SSL versions that NetAgent supports

HTTPS Protocols

Select the encryption version

SSL v2

SSL v3

SSL v1.0

SSL v1.1

SSL v1.2

Clicking Apply reboots the NetAgent card.

SSL Information

This is to upload the SSL certificate. When both public key and certificate are uploaded to NetAgent web server, the communication is encrypted by SSL

(To communicate via Https, make sure to enable Https port 443.). To create its public key and certification, please refer to OpenSSL software in the CD

RADIUS Server Settings

If RADIUS server authentication is required for the network, add the NetAgent by entering the following parameters.

Enable RADIUS in Web/Telnet Login

To select if to enable RADIUS

RADIUS Server Address

To enter the IP address of the RADIUS Server

Authentication Port

RADIUS port number (Default is 812)

Shared Key

Enter the Shared Key between RADIUS Server and client


Connection Timeout

Set the number of seconds to suspend the login time after the RADIUS server is rejected

Connection Retry

Sets the number of connections to the RADIUS server again

System Time

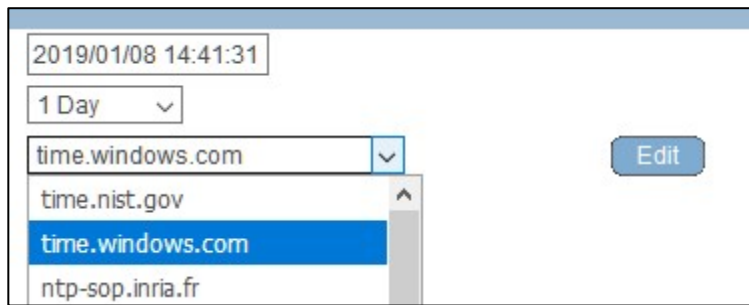

2019/01/08 14:41:31

1 Day


time.windows.com

time.nist.gov

time.windows.com

ntp-sop.inria.fr

Edit

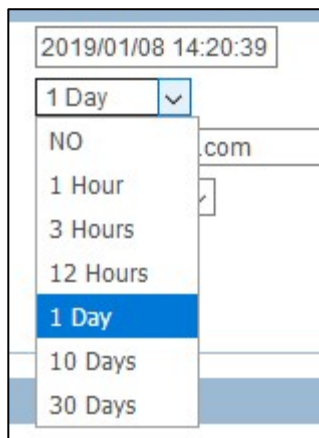

2019/01/08 14:20:39

1 Day

NO

1 Hour

3 Hours

12 Hours

1 Day

10 Days

30 Days

This page is to set NetAgent's system time. NetAgent could synchronize with external or internal Time Server.

System Time

System Time (yyyy/mm/dd hh:mm:ss)

To display the current system time/date of the NetAgent, click on Adjust Now to adjust to the correct time/date automatically

Time Between Automatic Updates

To set an interval for time synchronization.

Time Server

The Timeserver can be select from the drop-down list or by adding it manually.

Recommended: Timw.Windows.com or Time.NIST.gov

Time Zone (Relative to GMT)


To select its GMT zone

Using Daylight Saving Time

Select whether to use the daylight-saving time system to adjust the clock for 1 hour.

Rebooting the NetAgent 9 Card

Restart

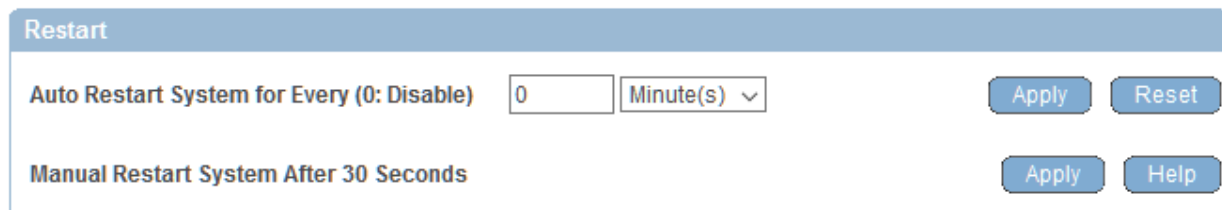

The screenshot shows a web interface titled "Restart". It contains two main sections. The first section is "Auto Restart System for Every (0: Disable)", which includes a text input field containing the number "0" and a dropdown menu labeled "Minute(s)" with a downward arrow. To the right of this section are two buttons: "Apply" and "Reset". The second section is "Manual Restart System After 30 Seconds", which has two buttons: "Apply" and "Help".

This reboots the SNMP card ONLY; Not the UPS.

Auto Restart System for Every (0 is disabled)

NetAgent to restart automatically at a preset hour or minute

Manual Restart System After 30 seconds

Once click on Apply, NetAgent would restart after 30 seconds

Language

This page is to set the language interface for the NetAgent.

Interface Language

To set the language of NetAgent web pages. When first start login to the webpage of NetAgent, NetAgent will auto detects the OS language of the PC and shows the same language on its web pages. Users may choose the language per preference

Note: Users have to enable cookies before they use this function.



The screenshot shows a web interface titled "Interface Language". It features a list of radio buttons for selecting a language. The languages are arranged in two columns. The first column includes English (selected), Deutsch, Português, Español, Français, Italiano, and Türkçe. The second column includes 繁體中文, 简体中文, 한글, 日本語, Русский, ไทย, and Polska. At the bottom of the form, there is a note: "(Note: Setting preferences will not work if you have disabled cookies in your browser.)"

Email Preference

Select a language preference the NetAgent's emails and SMS messages

Languages supported by NetAgent

Log Information Tab

If no events or data are listed, you may need to adjust the Date of Event range at the bottom of the page.

2019/02/27 08:23:17	119.0	120.0	60.0	0	100	27.42	2.28	16.0°C 60.8°F
---------------------	-------	-------	------	---	-----	-------	------	---------------

Date of Datalog 2019/02/27 ▾

Save Data Log

Clear...

Help

Event Log

It shows a record of all events, giving the Date/Time of the event and a detailed description of each. Log capacity is 1000 logs. When reaching to the limit, it rewrites on the previous logs. The log can be saved as a csv file.

Data Log

It records UPS Input Voltage/Output Voltage/ Frequency/ Loading/Capacity/ Log capacity is 5000 logs. When the limit is reached, it rewrites on the previous logs. Data Logs are saved in the CSV format by clicking on "Save Data Log."

Battery Test Log (Only Available on the CY54-03 Model)

To record the UPS Self-Test and it shows in the graphic. UPS Self-Test option is available under System Information > Remote Control

UPS Event Log (Only Available on the CY54-04 Model)

Help Tab

Search NetAgent

This is to display all the NetAgent cards within the network with the card's serial number; Mac Address; Hardware/Firmware version and its IP address. Double click on the highlighted unit to open the webpage of such device.

Serial Port Debug (Only Available on the CY54-03 Model)

Please contact Marathon Power at support@marathon-power.com for information about the Serial Port Debug feature.

Help

This opens another browser tab showing a NetAgent 9 card's web interface with descriptions and explanations for each item, to illustrate each feature/option that the NetAgent offers.

About

It shows NetAgent's hardware/firmware and serial number.

About

Create a Master Configuration when installing multiple NetAgent 9 cards

Create a Master configuration by saving this configuration as a master; then by "Restoring" this configuration on another SNMP card, and changing identifiers unique for the new UPS, the card is ready to connect to your network.

Save/Restore Settings

Save Current Configuration

Click on Save to save the configuration to your PC. The text file has a default format of YYYY_MMDD_####.cfg. Administrator permission is required.

Restore the previous configuration

Use this function to restore a *.cfg configuration that previously saved. Click Browse, to the location of the file and click Restore.

Reset to factory default

This function resets all NetAgent settings to their default values, **including changing the Network configuration to DHCP.**

Firmware Update Settings See Section 5. Firmware Updating

5. Firmware Upgrading

IMPORTANT TO READ!

The firmware available for download from the MegaTec web site is not 100% compatible with our products. Our products use a custom (OEM) firmware version developed by MegaTec specifically for our products.

Firmware Upgrading

There are two methods for updating the firmware on your NetAgent 9 card, using the built-In firmware updater located under the Help Tab/About/Firmware Updating Settings explained below or using the Netility software program explained below and on page 19.

Using the Built-In updater, it is very important that you use the correct ftp, username and password.

For the SNMP-CY54-**03** SNMP card, the user name and password must be **netagpcm**

For the SNMP-CY54-**04** SNMP card, the user name and password must be **netagpb**

If you see that the user name and password is **netagent9** you must change them.

To change the user name and password follow these steps.

1. Clear the ftp server name ftp.icv99.com
2. Enter the correct user name and password.

For the SNMP-CY54-**03** SNMP card, change the user name and password to **netagpcm**

For the SNMP-CY54-**04** SNMP card, change the user name and password to **netagpb**

3. Retype the same ftp server name ftp.icv99.com, that you cleared in step 1.
4. Click on Update Now and follow the prompts.

6. Lost Password

Please follow the steps below

1. Using a PC on the same network as NetAgent card with the unknown password
2. Open a web browser and type <http://xxx.xxx.xxx.xxx/password.cgi> (xxx.xxx.xxx.xxx is the IP address of the NetAgent)
3. Enter

For the ID: admin

For the password: Enter the password located on the label under the SNMP card.

4. Press continue and clear

Now, that the username and password have been cleared/removed, you can log into the card.





Marathon Power, Inc. 2020
2538 E. 54th Street
Huntington Park, CA 90255
Office: 310-689-2328
Fax: 310-689-2329
support@marathon-power.com
www.marathon-power.com